

Parts Included:

- **Fabric:** (1) Vinyl fabric
- **Frame Kit:** (2) Long, (2) Short Rails, (4) Legs with Leg Caps inserted, (4) Top Corners, (4) Bottom Corners
- **Hardware Kit:** (8) 1.5" Screws, (8) Lock Nuts and (4) Set Screws (pointed, shorter, 1" screws for legs)

Notes:

Lock Nuts have a beige core and do not require a washer.

- Attach Lock Nut to Screw with the beige core facing down, away from the head of the screw.
- Lock Nuts can only be tightened to a certain point.

DO NOT OVERTIGHTEN, OR THEY CANNOT BE REMOVED


Tools Needed:

- 3/8" Wrench or Adjustable Ratchet Wrench
- Phillips Head Screwdriver or drill
- Protected flat surface for work area


- # 1
- Attach Legs to Bottom Corner Brackets, using the included set screws.

Place set screw & tighten until screw is flush against bracket.

Drill is recommended. Apply some force, pushing into the screw while drilling so as not to strip screws.

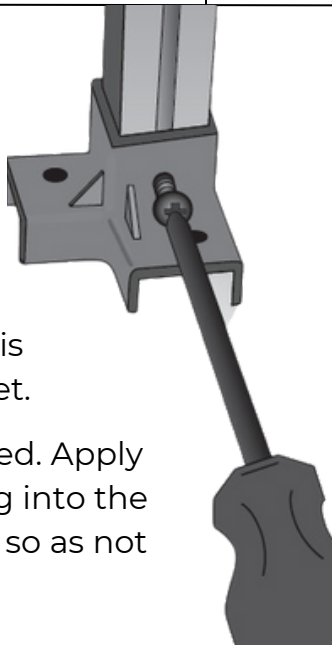


2

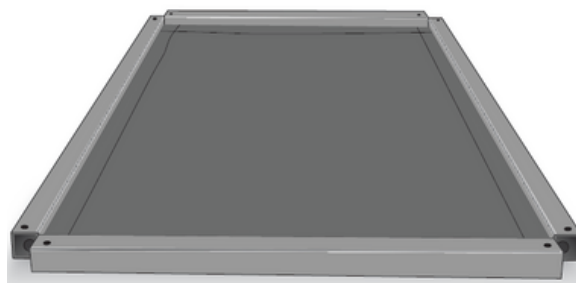

Assemble bed upside down. Lay vinyl fabric seam side up on a flat, protected work area.

Slide frame rails onto the fabric - insert edge of fabric into the channel within the rails. Slide the short rails on first, then the long rails.

3

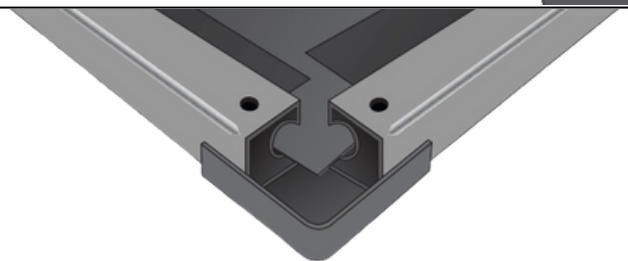


While the bed is still upside down, position the Top Corner Brackets and insert the 1.5" Screws.

4


Place Bottom Corner Brackets with attached Legs over the screws and secure with Lock Nuts and **HAND** tighten.

Note:

Fabric is meant to be taut to provide a firm sleeping area for your pet; the last corner may require some effort to assemble.

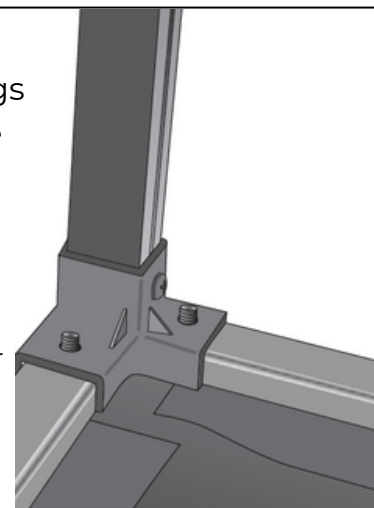

5

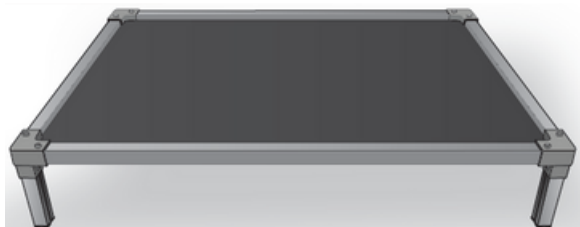

Flip bed face up. Use wrench and screwdriver to fully tighten nuts - using an adjustable ratchet maybe easier.

A drill may be used but **USE CAUTION** not to overtighten or strip screws.